



HydroGrip Motivate Safety Flooring Rolls

Technical Manual

Installation · Maintenance · Warranty

Revised on 27Jun2022
Supersedes all previous versions.
Check website for current version.

Installation

Job Site Conditions	2
Subfloors	2
Subfloor Preparation	2
Storage & Handling	3
Roll Installation	4
Heat Welding	5
Sanitary Base (requires 4mm underlayment)	5
Drains	7

Maintenance

Cleaning Procedures	7
Cleaning Product Chart	8

Warranty

Warranty	9
----------	---

Installation

I. JOB SITE CONDITIONS

1. Installation should not begin until after all other trades are finished in the area. If the job requires other trades to work in the area after the installation of the floor, the floor should be protected appropriately.
2. Areas to receive flooring should be weather tight and maintained at a minimum uniform temperature of 65°F (18°C) for 48 hours before, during, and after the installation.

II. SUBFLOORS

1. Suitable subfloors include concrete, Portland- based patching and leveling materials, and wood.

NOTE: Gypsum-based patching and leveling compounds are not acceptable.

NOTE: The selected Portland-based patching and self-leveling materials must be moisture resistant and rated to withstand the RH moisture levels on the project.

2. Wood Subfloors – Wood subfloors should be double construction with a minimum thickness of one inch. The floor must be rigid and free from movement with a minimum of 18 inches of well-ventilated air space below.
3. Underlayments – The preferred underlayment panel is American Plywood Association (APA) underlayment grade plywood, minimum thickness of 1/4-inch, with a fully sanded face.

NOTE: Particleboard, chipboard, Masonite and luan are not considered to be suitable underlayments.

3. Concrete Floors – Concrete shall have a minimum compressive strength of 3000 psi. New concrete slabs should cure for a minimum of 28 days before installing HydroGrip. Concrete must be fully cured and permanently dry.

III. SUBFLOOR REQUIREMENTS AND PREPARATION

1. Subfloors shall be dry, clean, smooth, level, and structurally sound. They should be free of dust, solvent, paint, wax, oil, grease, asphalt, sealers, curing and hardening compounds, alkaline salts, old adhesive residue, and other extraneous materials, according to ASTM F710.
2. Subfloors should be smooth to prevent irregularities, roughness, or other defects from telegraphing through the new flooring. The surface should be flat to the equivalent of 3/16" (4.8 mm) in 10' (3.0 m).
3. Mechanically remove all traces of old adhesives, paint, or other debris by scraping, sanding, or scarifying the substrate. Do not use solvents. All high spots shall be ground level and low spots filled with a Portland-based patching compound.
4. All saw cuts (control joints), cracks, indentations, and other non-moving joints in the concrete must be filled with a Portland-based patching compound.
5. Expansion joints in the concrete are designed to allow for expansion and contraction of the concrete. If a floor covering is installed over an expansion joint, it will likely fail in that area. Use expansion joint covers designed for resilient flooring.
6. Always allow patching materials to dry thoroughly and install according to the manufacturer's instructions. Excessive moisture in patching material may cause bonding problems or a bubbling reaction with the E-Grip™ III adhesive.

HAZARDS:

SILICA WARNING – Concrete, floor patching compounds, toppings, and leveling compounds can contain free crystalline silica. Cutting, sawing, grinding, or drilling can produce respirable crystalline silica (particles 1-10 micrometers). Classified by OSHA as an IA carcinogen, respirable silica is known to cause silicosis and other respiratory diseases. Avoid actions that may cause dust to become airborne. Use local or general ventilation or provide protective equipment to reduce exposure to below the applicable exposure limits.

ASBESTOS WARNING – Resilient flooring, backing, lining felt, paint, or asphaltic “cutback” adhesives can contain asbestos fibers. Avoid actions that cause dust to become airborne. Do not sand, dry sweep, dry scrape, drill, saw, beadblast, or mechanically chip or pulverize. Regulations may require that the material be tested to determine the asbestos content. Consult the document “Recommended Work Practices for Removal of Existing Resilient Floor Coverings” available from the Resilient Floor Covering Institute.

LEAD WARNING – Certain paints can contain lead. Exposure to excessive amounts of lead dust presents a health hazard. Refer to applicable federal, state, and local laws and the publication “Lead Based Paint: Guidelines for Hazard Identification and Abatement in Public and Indian Housing” available from the United States Department of Housing and Urban Development.

7. Moisture must be measured using the RH Relative Humidity test method per the ASTM F2170 test standard. Moisture content should not exceed the allowable limit of the selected Ecore adhesive.

- a. E-Grip III – RH limit of 85% – normally selected
- b. E-Grip 95 – RH limit of 95% – higher RH applications
- c. E-Grip 99 – RH limit of 99% – highest RH applications

If RH levels exceed the selected Ecore adhesive’s RH limit, stop and correct situation.


8. In the event that a moisture mitigation system is required, it must conform to the ASTM F3010 Standard Practice for Two-Component Resin Based Membrane Forming Moisture Mitigation Systems for use Under Resilient Floor Coverings.
9. It is essential that pH tests be taken on all concrete floors and be within the allowable limits of the selected Ecore adhesive. If the pH is greater, it must be neutralized prior to beginning the installation.
10. Adhesive bond tests should be conducted in several locations throughout the area. Glue down 3’ x 3’ test pieces of the flooring with the recommended adhesive and trowel. Allow to set for 72 hours before attempting to remove. A sufficient amount of force should be required to remove the flooring and, when removed, there should be adhesive residue on the subfloor and on the back of the test pieces.

IV. MATERIAL STORAGE AND HANDLING

1. Material should be delivered to the job site in its original, unopened packaging with all labels intact.
2. Material must be stored in a climate-controlled environment not to exceed 85°F (30°C)
3. The material and adhesive must be acclimated at room temperature for a minimum of 48 hours before starting installation.
4. Note: Shipping pallets, cradles, banding, etc. are not intended for storage. After 7 days, remove material from shipping pallets, cradles, etc. Rolls of vinyl and vinyl laminated to rubber should be stored standing up. Storing vinyl rolls and vinyl-laminated-to-rubber rolls on their side will result in wetting.
5. **Inspect all materials for visual defects before beginning the installation. No labor claim will be honored on material installed with visual defects. Verify the material delivered is the correct style, color, and amount. Any discrepancies must be reported immediately before beginning installation.**
6. **Unroll all rolls and allow to relax overnight.**

7. **PLEASE NOTE:** ALL HydroGrip rolls **must be unrolled and installed in the same direction within each consecutive run. Adjacent rows must be laid in the opposite direction to avoid shade variations between the rolls.**

Adjacent rows of **HydroGrip** Rolls go in **OPPOSITE** directions

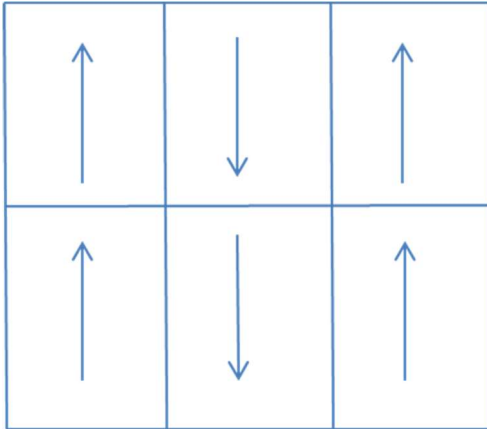

NOTE: Special care should be taken not to sharply fold or crease the material during installation. This can result in permanent visual damage to the wear layer which is not covered under Ecore’s product warranty.

V. INSTALLATION – ROLL MATERIAL

1. Make the assumption that the walls you are butting against are not straight or square. Using a chalk line, make a starting point for an edge of the flooring to follow. The chalk line should be set where the first seam will be located.
2. Cut rolls at the required length, including enough to run up the wall a couple inches.
3. If end seams are necessary, they should be staggered on the floor and overlapped approximately 2”. End seams will be trimmed after acclimation period using a square to ensure they fit tightly without gaps.
4. After allowing proper acclimation and rough cuts are made, you may begin the installation.
5. Align the first edge to the chalk line.

Note: It is very important that the first seam is perfectly straight.

6. After end seams are trimmed, the edges should fit snug with no visual gaps. Care should be taken to not over compress the seam. Over compressed seams will cause peaking.
7. Repeat for each consecutive sheet necessary to complete the area or those rolls that will be installed that day.

INSTALLATION – Adhesive Application

1. After performing the above procedures, begin the application of the adhesive. We recommend E-Grip III, a one-component moisture-cured polyurethane adhesive. **E-Grip III should not be mixed.** It is specially formulated for use right out of pail. **Apply E-Grip III to substrate with 1/16” square- notched trowel.**
2. Fold over the first drop along the wall (half the width of the roll).
3. Spread the adhesive, taking care not to spread more E-Grip III than can be covered with flooring within 30 minutes. The open time of the adhesive is 30–40 minutes at 70°F and 50% relative humidity.

NOTE: Temperature and humidity affect the open time of the adhesive. Temperatures above 70°F and/or relative humidity above 50% will cause the adhesive to set up more quickly. Temperatures below 70°F

and/or relative humidity below 50% will cause the adhesive to set up more slowly. The installer should monitor the on-site conditions and adjust the open time accordingly.

NOTE: Do not allow E-Grip III to cure on your hands or the flooring. We strongly suggest wearing gloves while using E-Grip III. Immediately wipe off excess adhesive with a rag dampened with mineral spirits! Cured adhesive is very difficult to remove from hands.

4. Lay the flooring into the wet adhesive. Do not allow the material to “flop” into place; this may cause air entrapment and bubbles beneath the flooring.
5. Immediately roll the floor with a 75–100 lb. roller to ensure proper adhesive transfer. Overlap each pass of the roller by 50% of the previous pass to ensure the floor is properly rolled. Roll the width first and then the length. Roll again within the first 60 minutes.
6. Fold over the second half of the first roll and half the width of the second roll to expose the substrate. Spread the adhesive, roll the flooring, and repeat for each consecutive drop.
7. Continue the process for each consecutive drop. Work at a pace so that you are always folding material back into wet adhesive bed.

NOTE: Never leave adhesive ridges or puddles. They will telegraph through the material.

8. Hand roll all seams after the entire floor has been rolled.
9. Keep traffic off the floor for a minimum of 24 hours and free from rolling loads for a minimum of 72 hours.

VI. INSTALLATION – Heat Welding

1. Groove seams to 2/3 of the depth of the vinyl

NOTE: Use a power groover fitted with a diamond grit abrasive cutting blade designed for metal impregnated safety floors.

2. Heat weld with manufacturer’s welding rod. All seams must be heat welded.
3. Complete first pass skive. Mozart skiving knife is recommended.
4. Let weld cool for 10-20 minutes and then do final skive.

VII. INSTALLATION – Sanitary Base (Use 4mm underlayment)

1. Remove the rolls from the shrink wrap and unroll it onto the floor. Lay the material on the floor in a way that will use your cuts efficiently. Cut all rolls at the required length.
2. If end seams are necessary, they should be staggered on the floor and overlapped approximately 2”. End seams will be trimmed after acclimation period using a square to ensure they fit tightly without gaps.
3. After allowing proper acclimation and rough cuts are made you may begin the installation.
Note: it is very important that the first seam is perfectly straight.
4. Position the second roll so it is snug with the adjacent roll, but not compressed. After end seams are trimmed, the edges should fit snug with no visual gaps. Care should be taken to not over compress the seam. Over compressed seams will cause peaking.
5. Repeat for each consecutive sheet necessary to complete area or rolls that will be installed that day.
6. After the rolls are rough-fitted for the room, strike chalk lines 2” from the walls for Sanitary Base.
7. Where the chalk outline for the seam is marked, make square cut with a fixed, straight blade utility knife to prepare the edge for the picture frame Sanitary Base installation. This allows the 2” space needed for the Sanitary Base to fit between the roll material and the walls.
8. Prepare the **4mm** x 2” rubber underlayment strip to be installed between the wall and the prepared edge of the rolls.

9. After performing the above procedures, begin the application of the adhesive. We recommend E-Grip III, a one-component moisture-cured polyurethane adhesive. Do not mix the E-Grip III; use it right out of the pail, and apply to the substrate using a 1/16" square notched trowel.
10. Remove the **4mm** x 2" rubber underlayment and set aside. Fold over the first roll drop along the wall (half the width of the roll).
11. Spread the adhesive using the proper size square-notched trowel. Take care not to spread more E-Grip III than can be covered with flooring within 30 minutes. The open time of the adhesive is 30–40 minutes at 70°F and 50% relative humidity.

NOTE: Temperature and humidity affect the open time of the adhesive. Temperatures above 70°F and/or relative humidity above 50% will cause the adhesive to set up more quickly. Temperatures below 70°F and/or relative humidity below 50% will cause the adhesive to set up more slowly. The installer should monitor the on-site conditions and adjust the open time accordingly.

NOTE: Do not allow E-Grip III to cure on your hands or the flooring. We strongly suggest wearing gloves while using E-Grip III. Immediately wipe off excess adhesive with a rag dampened with mineral spirits! Cured adhesive is very difficult to remove from hands.

12. Lay the roll flooring **and** rubber underlayment into the wet adhesive. Do not allow the sheet material to "flop" into place; this may cause air entrapment and bubbles beneath the flooring.
13. Immediately roll the floor with a 75–100 lb. roller to ensure proper adhesive transfer. Overlap each pass of the roller by 50% of the previous pass to ensure the floor is properly rolled. Roll the width first and then the length. Hand roll all seams after the entire floor has been rolled.
14. Fold over the second half of the first roll and half the width of the second roll. Taking roll sizes into account, this will provide an exposed area of substrate of 6 feet wide and 30 feet in length per roll. Spread the adhesive, roll the flooring, and repeat for each consecutive drop.
15. Roll the **4mm** x 2" rubber underlayment into the adhesive and thoroughly roll with a hand roller
16. Continue the process for each consecutive drop and 2" rubber underlayment. Work at a pace so that you are always folding material back into wet adhesive bed.
17. Let the adhesive cure for several hours before installing Sanitary Base.
18. Sanitary base should be used for the entire area (except at the doorway), or as specified. Gaps between the wall and subfloor must not be larger than 1/8 inch. Gaps larger than 1/8 inch must be filled and smoothed, using a suitable product, before Sanitary Base installation.
19. Ensure the wall is dry, smooth and clean. If dusty, use a water-based primer diluted 1:1 with clean, potable water. Apply using a small paint brush.
20. Leaving the wax paper on the sides of the roll, apply 4" Ecore Wall Contact Tape directly to the wall (1/8 inch up from the floor), pressing firmly into place.
21. **Cut the 3-3/4" E-Flash Tape down to 2"** and install 2" inch Ecore Floor Super Tape to the top of the underlayment, tight to the intersection between the wall and floor, pressing firmly into place. Roll all tape with a hand roller before removing wax paper and before installing the Sanitary Base.
22. Dry cut the Sanitary Base to length, mitering as required, and ensure a tight fit at all seams. Remove the wax paper from the 2 inch Ecore Floor Super Tape and firmly press the sanitary base into the tape, keeping it tight to the flooring.
23. Remove the wax paper from the 4" Ecore Wall Contact Tape and firmly press Sanitary Base against wall.
24. Roll Sanitary Base with a hand roller to ensure a good bond.
25. To weld, groove all seams with a hand groover so as not to expose the rubber underlayment.
26. **Heat weld the flat seams** and **cold weld the vertical seams**.
27. Cold-welding the vertical seams: Apply masking tape 1/8" away from each vertical seam on both sides of the seam. Apply a bead of cold weld and smooth the cold weld with a rounded spatula. Remove the tape and smooth the edges where the tape ended. Let cold weld dry 8 hours before initial cleaning.
28. Hand roll all seams after the entire floor has been rolled.
29. Keep traffic off the floor for a minimum of 24 hours. Floor should be free from rolling loads for a minimum of 72 hours.

VIII. Drains

When installing HydroGrip Motivate flooring, it may be necessary to extend drain to meet the surface of the flooring. In some cases, the Extend-O-Drain can be used to allow drain cap to be even with the flooring.



Maintenance

HydroGrip Motivate incorporates a polyurethane reinforcement, which protects the floor covering by resisting soiling and scuffing. Combined with the superior closed surface finish, this enhanced protection allows the use of a polish-free maintenance regime. This protection ensures that the intensity of the maintenance and overall cleaning costs are significantly reduced.

NOTE: Rubber feet or rubber mats may cause permanent staining to vinyl surfaces. Ecore does not recommend the use of equipment containing rubber feet, rubber castors, or rubber-backed mats.

INITIAL CONSTRUCTION CLEAN

1. Wait a minimum of 24-48 hours before conducting the initial cleaning.
2. Remove all loose debris, dust and grit by sweeping or vacuuming.
3. Ensure that all traces of adhesive are removed from the surface of floor using a clean white cloth dampened with mineral spirits.
4. Damp mop with a neutral cleaner such as E-Cleaner.
5. Pick up the solution with a clean microfiber mop, using a continuous side-to-side motion. When the mop head becomes loaded, it will start streaking the floor. At this point the dirty mop head should be removed and placed into a laundry bag and a clean mop head fitted. The cycle should then be repeated until the whole floor is completed.

ROUTINE MAINTENANCE

1. Mop, sweep or vacuum to remove dust and loose dirt.
2. Mop to remove stubborn marks with a neutral cleaner.
3. Pick up the solution with a clean microfiber mop, using a continuous side-to-side motion. When the mop head becomes loaded, it will start streaking the floor. At this point the dirty mop head should be removed and placed into a laundry bag and a clean mop head fitted. Repeat to complete floor.
4. Damp mop or utilize an auto scrubber with a properly diluted neutral cleaner on a regular basis.
5. As necessary, wet scrub with a red scrubbing pad or soft nylon brush on a low-speed rotary scrubber to prevent soil build up. In areas subject to heavy soiling, machine scrubbing should be undertaken on a periodic basis, after neutral or alkaline cleanser has been applied to the floor and diluted to the manufacturer’s instructions.
6. Maintainers, polishes or floor dressings containing polish should never be applied as this may impair the slip resistance.

PERIODIC MAINTENANCE

The maintenance regime requires the installation of an effective barrier matting system. Using entryway systems/walk off mats (non-staining types) at entrances to buildings prevent dirt, sand, grit and other from being tracked onto the floor and can reduce subsequent maintenance requirements.

Fit protective feet to table and chair legs to prevent scratching.

1. These maintenance instructions are intended for the PUR HydroGrip Motivate floor covering products, which have a polyurethane reinforcement.

REGULAR CLEANING IS MORE BENEFICIAL AND COST-EFFECTIVE THAN OCCASIONAL HEAVY CLEANING.

APPROVED MAINTENANCE PRODUCTS					
PRODUCT	Ecore 866-795-2732 www.ecoreintl.com	Hilway Direct	PROCHEM	ECOLAB	Johnson DIVERSEY
NEUTRAL CLEANER	E-Cleaner	Neutral Cleaner	Neutral Clean	Oasis 100 or High Performance Neutral Floor Cleaner	Diversey Stride
ALKALINE CLEANER	E-Strip	Allsafe stripper		Maxx Dual Action	Diversey GP Forward
GERMICIDAL CLEANER	Enviro Care Neutral Disinfectant	Disinfectant Cleaner	Power Pouch Disinfectant	Neutral Disinfectant Cleaner	Diversey J-512 (Food Areas) Diversey Virex II 256 (non-Food Areas)
POWER CLEANER (SPOT CLEANER)			Stain Pro		Sprint Spitfire

The data presented is correct at the time of printing. Ecore reserves the right to update this information as and when necessary. For the latest information, please check our web site at www.ecoreintl.com. Providing this information does not imply any equivalence between each of the different manufacturer’s products, or that other products would prove unsatisfactory.



Warranty

Ecore guarantees our HydroGrip Motivate Safety Flooring products to be free from defects in workmanship and materials affecting wearing properties, and to meet all published HydroGrip Motivate specifications at time of manufacturing, provided that the product has been installed in accordance with the installation instructions issued by us. These warranties only apply to the original purchaser.

Please see the Ecore Warranty Guide for length specifics.

Any defect must be notified to us in writing, and we reserve the right to inspect and investigate any alleged defect. If found to be defective under normal non-abusive conditions, at the discretion of Ecore, the sole remedy against the seller will be to repair, to replace, or to issue a credit not exceeding the selling price of the defective goods. If product is no longer available, Ecore reserves the right to substitute similar product of equal value and/or quality.

This warranty does not cover defects arising from any of the following:

1. Excessive Moisture
2. Chemical Reaction
3. Corrosion
4. Extremes in temperature
5. Abnormal usage above which the product is specified
6. Wear from chairs or other furniture without proper floor protectors
7. Indentations, scratches or surface damage caused by improper maintenance, misuse, negligence, spike heeled shoes, pebbles, sand, or other abrasive materials
8. Sub-floor irregularities causing premature wear
9. Dissatisfaction due to improper installation and/or maintenance
10. Labor on material installed with obvious defects
11. Labor costs on repair or replacement material
12. Any discoloration or bond failure as a result of unapproved adhesives or improper substrate preparation
13. Staining or discoloration caused by rubber feet, rubber castors, rubber-backed mats, etc.
14. Damage resulting from unapproved floor care products
15. Purchase of "seconds", "remnants", or other (non-first quality) flooring materials are not covered under this warranty.

These warranties are in lieu of any other warranty expressed or implied. Ecore shall not be liable for any incidental or consequential damages which may result from a defect. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. These warranties give you specific rights, and you may also have rights which may vary from state to state. To know what your legal rights are in your state, consult your local or state Consumer Affairs Office or your State Attorney General. For complete and latest warranty information, please see www.ecoreintl.com .

Manufactured in the U.S.A. by:



715 Fountain Ave – Lancaster, PA 17601

866-795-2732 – www.ecoreintl.com

©2022 All designs and colors are copyrighted by Ecore